



Elipse® Half Mask with ABEK1P3 Filters

Protecting you for
life's best moments.


WWW.GVS.COM



H: 130 mm D: 117 mm W: 195 mm

Weight

Mask + Filters: S/M 320 g, M/L 327 g
Filters: 236 g

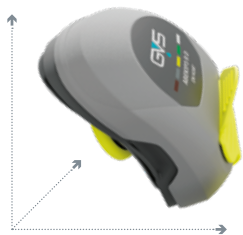

H: 110 mm D: 68 mm W: 69 mm



Patent Pending

1. Particulate pleated filter (total length 645 mm)
2. Activated carbon treated for gas adsorption
3. Designed to help airflow diffusion and full usage of the activated carbon
4. Inhalation valve

Applications



Type	Protection
A	Organic gases and vapours with a boiling point above 65°C
B	Inorganic gases and vapours (excluding carbon monoxide)
E	Sulphur dioxide and other acidic gases and vapours
K	Ammonia and organic ammonia derivatives
P3	Dust, mist and toxic fumes (min. 99.95% efficiency)



Standards

Facemask EN 140:1998
Cartridge filter
EN 14387:2004+A1:2008 ABEK1P3 R D

Shelf Life

5 years (mask & filters). See storage conditions on Instructions for Use.
Filters are re-usable and changeable.

Material

- Inner mask body in Medical Grade TPE
- Covers in PP/ABS
- Valve body in nylon with silicone diaphragms
- Gas filters: Activated carbon sealed into ABS shell
- Particulate filters: Mechanical type multi-layer HESPA synthetic media encapsulated with TPE. Particulate filters are integrated with the carbon element



Comes with **life extender** protective caps

Part #	Description
SPR213K (S/M) SPR223K (M/L) SPR233K (XL)	Elipse® ABEK1P3 Respirator Package also includes: ■ Replaceable filters
FIL253K	Elipse® ABEK1P3 Replacement Cartridges Pair
SPM009	Elipse® Carry Case
SPM646	Elipse® Fit Test Adaptor