




# ELIPSE® HALF-FACE MASK + HESPA™ A1P3 DUST (R) Filters

**TDS**  
Technical  
Data Sheet

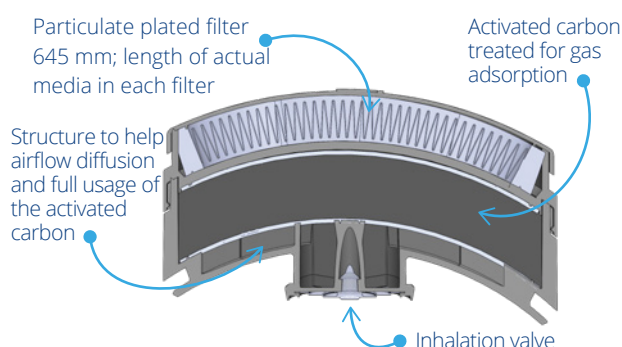

## Standards

EN140: 1998 Mask Body  
EN14387: 2004 + A1: 2008 A1P3 R D  
(suited for organic gases and dust)  
CE 2797 - UKCA 0086

## Weight

Mask + Filter: net (S/M) 267 g; (M/L) 271 g  
gross (S/M) 337 g; (M/L) 341 g  
Filter: net 90 g each; both net 180 g,  
gross 208 g

## Material

- Mask:** Medical grade TPE Conforms to ISO 10993-10: 2010 for irritations. Mask body latex and silicone free, odour free. Valve Body in Nylon, Inhalation/Exhalation diaphragm in Silicone. 4 point adjustable elasticated head and neck strap with comfort pad in TPE.
- Gas Filters:** Activated carbon sealed into a ABS Shell.

## Efficiency

P3 >99,95% for 0,3 µm particulate  
At 1000 ppm:  
A1 >70 minutes cyclohexane (C<sub>6</sub>H<sub>12</sub>)

## Shelf Life

5 years (mask & filters) See storage conditions on Instructions for Use. Filters are re-usable and changeable.

## Production

United Kingdom  
100% of filters NaCl Tested

Code	Description	Quantity
SPR338 (S/M) SPR503 (M/L) SPR231G (XL)	Elipse Half Mask complete with A1P3 filters	10 pcs. per box
SPR341	Elipse A1P3 replacement filters	10 sets of 2 pcs. per box
SPM008	Elipse Low Profile Mask Carry Case (Belt holder)	10 sets per box
SPM414	Portacount Face Fit Kit adaptor	10 sets per box
SPM420	Kit of Prefilter Kits - 2 holder and 10 pads	10 kits per box
SPM421	Kit of Prefilter - 20 pads	10 kits per box

## Applications - Organic gases, dust, mist and fumes

### Welding

Metal Fumes and Dust in confined space (gas welding)



### Construction

Paint, Moulds.



### Car & Ship Repair

Epoxite, Paint, Solvents

### Manufacturing

Solvents, various Organic Gases



### Agriculture

Pesticides